

# highQ<sup>TM</sup> Learning Tab

## User Guide

Models: ELT0801H and ELT0703H



Designed by  
the EPIK Learning Company  
California, USA

# Welcome!

Thank you for purchasing your new HIGHQ™ Learning Tab. This User Guide will provide step-by-step instructions to help you learn to use your new device. After opening the box, make sure the package contents are available for you.

## Package contents:

- HIGHQ™ Learning Tab.
- Quick Start Guide
- AC Charger
- USB Cable
- Matching Gel Case

# Index

Safety Warnings	4
Technical Specifications	5
Hardware Overview	6
Micro SD Card Slot	7
Charging	7
<hr/>	
Initial setup	8
Basic Android setup	8
HIGHQ™ Learning Tab One-Time Setup	8
<hr/>	
Software Overview	10
Power on/off	10
Unlock and Lock	11
Navigation bar	11
Home screen	12
Turn Wi-Fi on/off and choosing a network	12
<hr/>	
Camera	13
Browsing the Internet	14
Downloading Content from the Google Play Store	14
Change or Retrieve Grown-Up PIN	14
Backup with Google	14
Return Tablet to Factory Settings	15
<hr/>	
Managing Kid's Place	15
Entering Kid's Place	15
Add/Remove Apps in Kid's Place	15
Enable/Disable Internet Access for Apps	16
Looney Tunes Phonics™ Initial Setup	17
Legal Terms	18

## Safety Warnings

---

Do not disassemble the product or accessories.

Do not use alcohol, thinner, or benzene to clean the surface of the device.

The device should be charged for about 6 hours during the first three charge cycles.

Do not store the device in places with high temperature, humidity, or dust. Avoid dropping or strong impact.

Use an appropriate volume setting. High volume may cause hearing damage when using headphones.

To charge the device, use the included USB cable and AC adapter.

When transferring data to/from a computer, do not suddenly disconnect the cable; this may cause the device to malfunction. Use a “Safely Remove Hardware” or “Eject” function on the computer.

Obey all local laws and regulations when using the device, such as when driving or aboard an aircraft.

The device and included accessories are not water resistant or waterproof, except for 8” tablet.

# Technical Specifications

## 8" Tablet


CPU (Processor)	Quad Core Intel Z3735G. 1.8GHz
Operating System	Android 5.0 (Lollipop)
Browser	Google Browser
Internal Storage	16GB
Memory (RAM)	1GB DDR3
Expansion Slot	Micro SD Card Slot, Support up to 32GB flash
Screen	8" TFT Touch Panel
Camera	Front 0.3 megapixel, Rear 2.0 megapixel
Screen Resolution	800*1280
Input Method	Touch Screen
Built-in speakers	1W 8ohm built in speaker
Earphone Jack	3.5 mm
USB cable	Micro USB
Battery	3.7V/4000mAH(500 Times in life) with Lithium-ion Polymer Battery
Size	190mm x 115mm x 9.5 mm
Weight	0.279kg
Voltage	AC 110-240V 50/60Hz DC 5V/2A
Operating Temperature	-10 C/14 F - 40 C/104 F
Network-Access	Wi-Fi (802.11 b/g/n)

## 7" Tablet

CPU (Processor)	Quad Core Intel Z3735G , 1.8GHz.
Operating System	Android 5.0 (Lollipop)
Browser	Google Browser
Internal Storage	16GB NAND Flash.
Memory (RAM)	1GB DDR3
Expansion Slot	Micro SD Card Slot, Support up to 32GB flash
Screen	7" TFT Touch Panel
Camera	Front 0.3 megapixel, Rear 2.0 megapixel
Screen Resolution	1280 x 800 pixels
Input Method	Touch screen
Built-in speakers	1W 8ohm built-in speaker
Earphone Jack	3.5 mm
USB cable	Micro USB
Battery	3.7V/4000mAH with Lithium-ion Polymer Battery.
Size	210mm x 143mm x 9.5 mm
Weight	0.300kg
Voltage	AC 110~240V 50/60Hz; DC 5V/2A
Operating Temperature	-10°C/14°F - 40°C/104°F
Network-Access	Wi-Fi (802.11 b/g/n)

# Hardware Overview

## Buttons and Ports

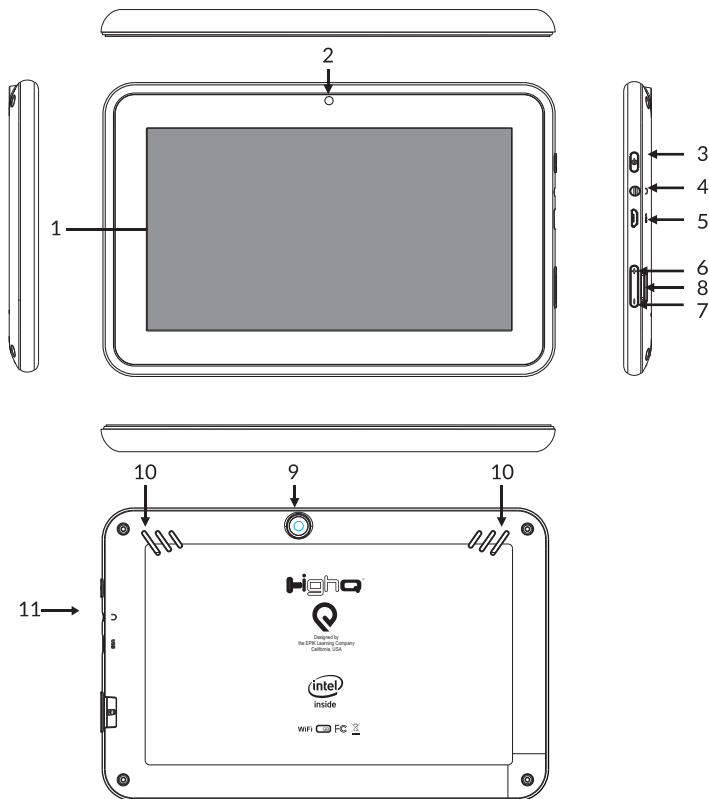

- |                   |                   |                              |
|-------------------|-------------------|------------------------------|
| 1. touch screen   | 5. micro USB port | 9. rear camera               |
| 2. front camera   | 6. volume up      | 10. speaker                  |
| 3. power button   | 7. volume down    | 11. mic (under tablet cover) |
| 4. headphone jack | 8. micro SD slot  |                              |

# Micro SD Card Slot / Charging

---

## Micro SD Card Slot

Your tablet is equipped with a micro SD memory card slot. You can use a micro SD memory card (sold separately) for additional storage of music, photos, files, etc. When inserting a micro SD memory card, insert as illustrated. Be careful not to insert it at an angle as doing so may cause damage to the tablet or memory card. To remove the card, press firmly and the card will pop out. It is recommended to eject the micro SD card only when the tablet is powered off.

## Charging

Use the included USB cable and AC adapter to charge the tablet. Other chargers may cause damage. Do not use the charger in a humid environment. Do not allow the charger to come in contact with liquid or moisture. Plug the AC Adapter into the outlet. Then connect the micro USB connector to the tablet.

# Initial Setup

To get started with your new HIGHQ™ Learning Tab, ensure that your tablet has been fully charged before the first use. Press and hold the power button for 5 seconds until you see the Highq Learning Tab™ logo on screen. Allow 1 minute for the tablet to power on. You will be prompted to start the initial setup process.

## Basic Android setup

1. Language selection: scroll through the list of languages to choose your preferred language then tap Start.
2. Wi-Fi setup: A list of Wi-Fi networks will appear. Tap your network name. If your Wi-Fi network is password protected, you will be prompted to enter the password. Tap Connect.

## Sign in with an Existing Google Account

If you have a Google account and would like to use it on your HIGHQ™ Learning Tab, tap Yes. If you do not have a Google account, follow the steps in the next section. If you do not want to connect your Google account at this time, tap No and you will be able to connect it at a later time in Android Settings.

After tapping Yes:

1. Type your Google account email address and password
2. Tap > to continue
3. You must agree to Terms of Service and Privacy policy to continue

## Creating a Google Account

If you do not have a Google account and would like to create one

## HIGHQ™ Learning Tab One-Time setup

Set up your Highq Learning Tab™ with a parent account. This will help in recovering a forgotten PIN.

1. Enter your First name, Last name, email address, and Zip Code.  
Tap Done on the keyboard then the green button to continue.
2. Enter a 4-digit PIN. Tap Next on keyboard and enter the same PIN in the box.
3. Tap Next. You may enter a PIN hint in the appropriate field.

## Initial Setup (Cont'd.)

---

Tap Done on the keyboard then tap the green Continue button.

4. Set up security questions: Choose a security question from the drop-down menu beside Question

1. Enter your answer in the box Answer Here.

Repeat this step for Question

2. Tap Done on the keyboard then tap the green Continue button.

### Kids Place One-Time setup

When kids are ready to use the tablet, they will have their own personalized content. A parent will need to complete the initial setup first.

1. To access the Kids Place, tap the Kids button on the right.

2. Review the Kids Place license agreement. Tap Accept to accept license terms.

3. Tap Start Kids Place

The tablet is now ready to be used by kids. They will now have access to Looney Tunes Phonics, the Smart Runner series, and other preloaded kids apps and books.

# Software Overview


Your HIGHQ™ Learning Tab features the Android™ operating system, version 5.0 (Lollipop). The included Google Play™ store app gives you access to a catalog of over one million apps. †† In addition, your tablet comes packed with over 30 apps such as the multi-award winning Looney Tunes™ Phonics and Smart Runner series of games.

## Power On/Off

To **power on** your tablet, press and hold the power button for 5 seconds.


To put your tablet in **sleep mode**, press and release the power button. This mode is best if you will use the device again soon.

To **power off** your tablet, press and hold the power button for 2 seconds, then tap **Power off**. This is best when the tablet will not be used for a longer period (more than a few days).

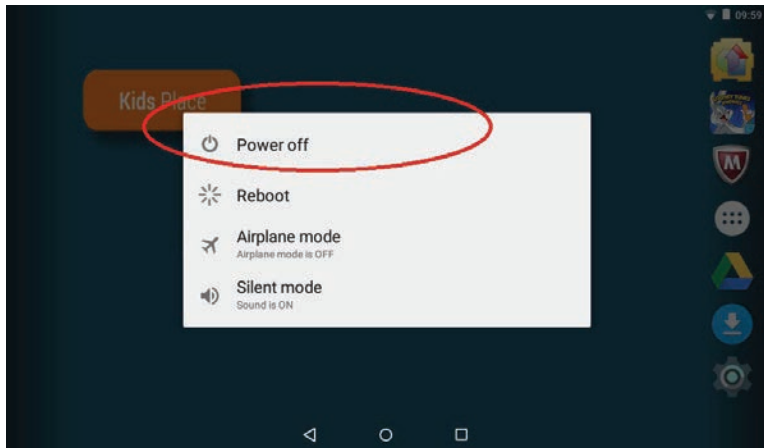

# Unlock and Lock


To unlock the tablet, drag the padlock upwards.

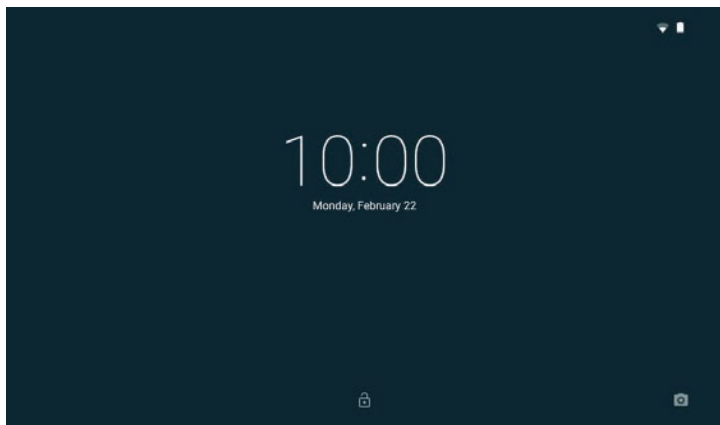

To lock, simply press the power button to lock the tablet (sleep mode).


## Navigation bar

The navigation bar along the bottom of the screen allows you to switch between apps. In some apps, the navigation bar becomes hidden. To reveal it, swipe up from the bottom edge of the screen. The left button, back, takes you back one screen. The center button, home, takes you to the home screen. The right button, recent apps, brings up thumbnails of recently used apps; tap one to switch to it.

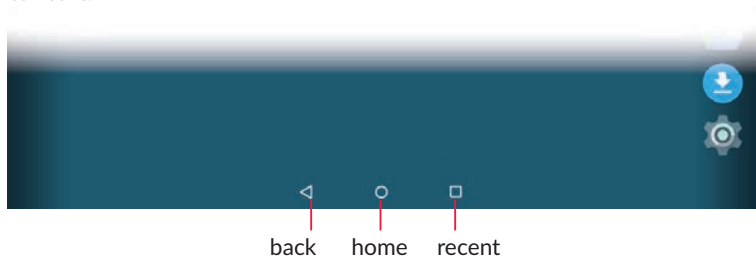

# Home Screen

This is the default home screen in Grown-up mode. To learn about using Kid's Place, refer to the chapter, "Managing Kid's Place."

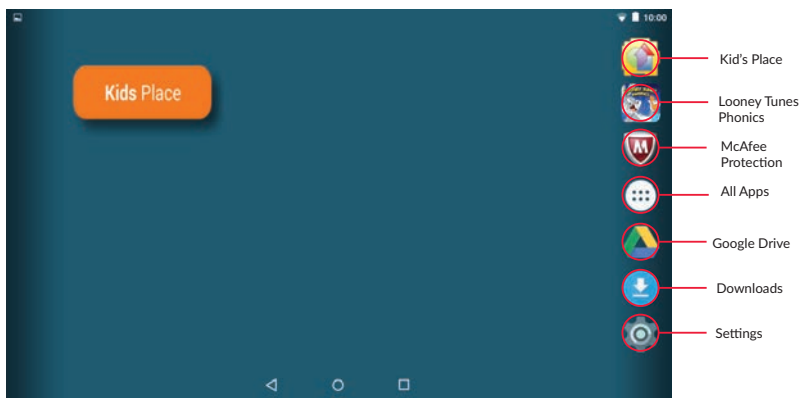

## Turn Wi-Fi on/off and choosing a network

If the tablet is in Kid's Place, tap the home button and enter your Grown-up PIN.

1. Tap **Home** at the bottom of the screen.
2. Tap Settings.
3. Tap **Wi-Fi**.
4. Tap the switch at the top of the screen to turn **Wi-Fi** on or off.

To choose a **Wi-Fi** network, make sure **Wi-Fi** is switched ON.

1. Tap the name of the network that you would like to connect to
2. If a password is required, enter it in the box.

Tap **Done** on the keyboard. Tap Connect. Once a connection is established, "**connected**" will appear under the network name.

# Camera

The camera app can be accessed from both Kid's Place and Grown-ups.



**Note:** photos taken from the camera are accessible to Grown-ups and Kid's Place.



To launch the camera from Kid's Place, tap Camera.




To launch the camera from Grown-ups, tap Camera from the home screen or from all applications.

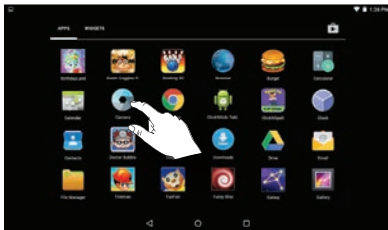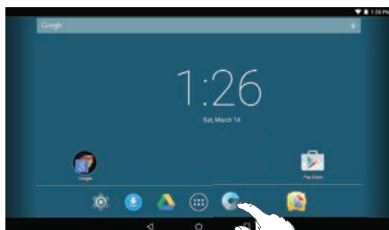

To switch between the front and rear camera, tap options then flip.

Swipe Right to switch between camera and video

Swipe Left to view recent pictures

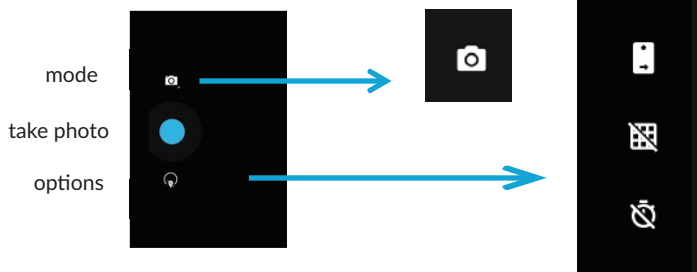


To view photos you have taken, swipe from right to left.

# Browsing the Internet



Your tablet comes preloaded with the Chrome web browser. Locate and tap the icon in your apps. Chrome works just like a web browser on other devices and computers.

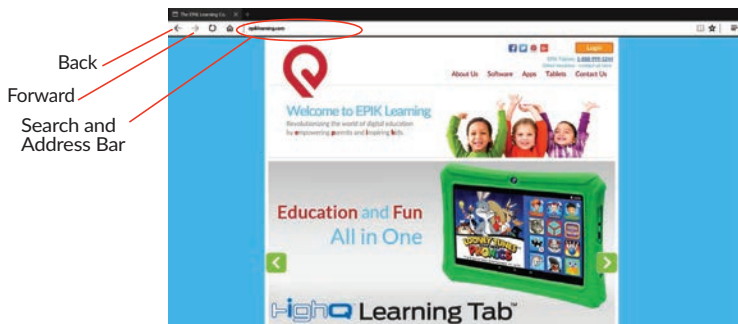

## Downloading Content from the Google Play store


Google Play offers an expansive catalog of apps, music, movies, etc.

## Change or Retrieve Grown-Up PIN

This is where I will explain the process of changing the PIN or retrieving it in the case of forgetting it.

## Backup with Google

When you create a Google account on your HIGH™ Learning Tab, you are given the option to automatically back up app data, Wi-Fi passwords, and other settings to Google's servers. If you wish to change this setting after creating or using your existing Google Account:

1. From Grown-Up mode, tap Settings
2. Scroll down and tap  Backup & Reset
3. Check, or uncheck Back up my data to enable or disable automatic backup of your data to Google's servers

## Return Tablet to Factory Settings

To perform a factory data reset, you must use the Grown-up login and PIN.

**WARNING:** A factory data reset will delete all user setting and data such as apps that you have downloaded, music, videos, photos, etc. All preloaded applications will automatically be reinstalled. After the factory data reset, you need to complete the initial setup process.


1. Tap Home at the bottom of the screen.
2. Tap Settings.
3. Scroll down and tap Backup & Reset.
4. Tap Factory data reset.
5. Tap Reset tablet.

# Managing Kid's Place

This chapter will guide you through steps to customize how Kid's Place works.

## Entering Kid's Place

If you are using the tablet in Grown-up mode, locate and tap the Kid's Place icon on the home screen to enter Kid's Place. Remember that your Grown-up PIN will be required to exit Kid's Place.

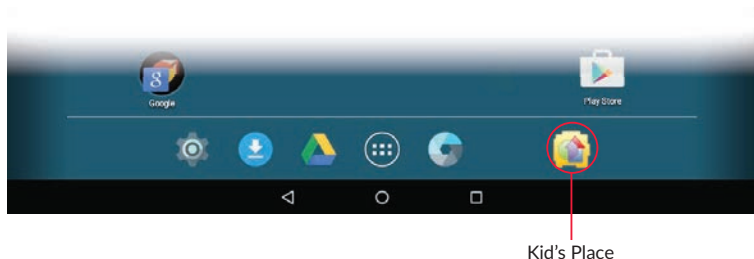

## Add/Remove Apps in Kid's Place

You may choose to allow or disallow certain apps from being used in Kid's Place.



## Managing Kid's Place (Cont'd.)



4. Tap "Settings Option"  
Enter your 4 digit pin,  
Select "Manage apps"

5. Each green ✓ indicates  
that the app is in Kid's Place.  
Tap to remove.

### Enable/Disable Internet Access for Apps

Kid's Place allows you to select which apps may connect to the internet. This option is useful, for example, to allow apps to receive updates, or to disallow apps that may display various advertisements.

Follow the steps **1-4** for "Add/Remove Apps in Kid's Place."

At the "Select Apps" screen, locate the internet icon next to each app icon.



A green 🌐 = internet is allowed. A blue 🌐 = internet is disabled. Tap to change

# Looney Tunes Phonics™ Initial Setup

---

1. Tap the Looney Tunes Phonics app icon to open the application.
2. Tap the white box labeled Student name, enter the student's name and tap Done on the keyboard.
3. To select a character icon, tap the pencil and paper icon on the top left. Keep tapping to scroll through the characters.
4. To adjust the starting lesson, use the ▲ and ▼ buttons by the student name.
5. To change the length of Looney Tunes episodes, use the buttons by Episode Content.
6. For more options, tap Advanced Settings.
7. Tap Run Lesson to start playing.

# Disclaimer

---

- Requires an internet connection.
- Google Play requires an internet connection. A Google account may be required to download apps.
- Many apps are available to download for free.
- Many apps are available for purchase.

Android is a trademark of Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. Google Play is a trademark of Google Inc.

# highQ<sup>™</sup> Learning Tab

**Model: ELT0703H / ELT0801H**



**EPIK Learning Company**

California - USA